

Polaris Ranger Rear Seat Installation Instructions

- 1. Remove the two center most factory bolts that are on each side of the floor of your utility bed and install seat brackets using those four bolts in their factory mounting holes. (Note: the longer ends of the brackets face the rear with the upright of bracket towards the out side of the bed on each side. (pic 1)**
- 2. Adjust these brackets to be 46 5/8" apart on the outside of the upright brackets of each side. (the tabs of the seat go on the outside of these brackets.)**
- 3. Once brackets are secured, place seat over brackets with tabs on the outside of the brackets. Install with the four 3/8" x 1.5" bolts, washers, and lock washers provided. Only hand tighten at this point.**
- 4. Align seat to preferred position and tighten the four bolts that hold the seat to the brackets.**
- 5. Install seatbelts/harnesses per manufacturer's instructions.**

