

Install Instructions

PRP Seats

Quick Release Seat Mount Install for Polaris RZR PRO XP, PRO R, Turbo R



Read through all of the instructions completely before beginning the install.

A.



Parts Included:

A. 2 x Seat Adapters

B. Hardware

8 x 1/4" x 20 x 1" Bolts

8 x 1/4" USS Washers

8 x 1/4" Lock Washers

Tools Needed: (not included)

7/16 Socket

B.



Time:

Approx 30 Minutes.



1. Start by Removing the stock seats from the vehicle. Slide it all the way forward, and pull the release lever.

*If you have a Polaris 6-Point Harness, you will need to unbolt the lap and front belts of the harness and pull them through the headrest slots. On the driver seat, you will also need to unclip the wiring harness in the center console. Re-install these parts after you have installed the PRP Seats.

2. Set up the Adapter Mounts

Unbox your PRP Seats and Adapter Mounts. Flip the seat upside down, and place the mounts on the bottom of the seat frame. Make sure the mounts are oriented the correct way (the cross bar should go at the back of the seat).



3. Install the Adapter Mounts

Line up the bolt channels on the mount to the holes on the bottom seat straps. These channel allow you to adjust the seat forward or back. (we recommend having the seats directly in the center of the channel). Use the supplied 1/4" bolts, washers and lock washers to connect the adapter to the seat, and tighten down with a 7/16" socket or wrench.



3b. NOTE: 2-Door Install

On 2 Door RZR's, you want to have the passenger side seat mounted all the way forward in the bolt channels included on our mount. Since the passenger seat cannot slide, you need to be able to reach behind the seat to access the release levers.



4. Install the Seat into the Vehicle

Install the PRP seat the same way you did with your OEM Seat. Place it in and get the seat brackets to slide around the bar in front, then click in the rear bar by pushing down until the plastic seat clips lock into place.



5. Removing the Seat

Since you no longer have the handle in front, you will need to manually release the seat in the back. Just slide the seat all the way forward, and use your hand to unlatch both plastic seat clips in the back.

On the 2 Door - Passenger Side that does now slide, you will just need to reach your hand around the back to release.



6. ... And You're All Done!

If you have any questions or experience issues, please contact your retail outlet first for help. However, the staff at PRP Seats is always happy to assist you.

1-800-317-6253.

customerservice@prpseats.com

Thank you! Ride safe!