

Install Instructions

PRP Front Seat Covers

2025+ Polaris RZR PRO XP, PRO R, PRO S



Read through all of the instructions completely before beginning the install.

Parts Included:

A. Seat Covers

- 1 x Driver Top Cover
- 1 x Driver Bottom Cover
- 1 x Passenger Top Cover
- 1 x Passenger Bottom Cover

Tools Needed: (not included)

Hands/Opposable Thumbs (Required)
Flat Head Screwdriver
Tucking Tool (Optional)

Time:

Approx 2 Hours.

Note:

To make installation easier, we highly suggest laying the PRP covers out in the sun just before install. This allows the covers to warm up, and makes the material to stretch easier when installing.



Front Seat Covers Install

1. Remove the Seats

Start by releasing the latch and pulling the seats out of the vehicle. You may need to partially undo the harnesses to get the seat all the way out.

Place the seat onto a clean table or work bench.



2. Remove the Plastic Insert

Pull hard on one side of the plastic insert until it pops off. Then pull on the other side until it comes off completely.



3. (Cooled Seats Only) - Remove Center Mesh

If you have the front seats with coolers in them - unzip the center section on the seat, and remove the white mesh. Put the mesh aside as you will be installing it onto the PRP cover later.



4. Un-Clip Cover Retainer Clips

On the back of the seat behind the release bracket, there are two plastic slot openings. In each slot are plastic retainer clips that hold the stock seat cover in place.

Hold the release bracket open, and use a flat head screwdriver to pop that retainer clip up, and feed it back through the slot so that it is free. Do this to the retainer clips on both slots.



5. **Remove the Stock Seat Cover**

Start by removing the top cover. Find the bottom edge of the cover on the side of the seat. Pull the cover edge out and off, then work your way up the seat until the entire side is off.

Tip - You can use a flat head screwdriver to carefully pop the first corner off to get it started.



6. **Remove the Stock Seat Cover (Cont.)**

Work your way up to the shoulder section and continue to pull the cover edges out and off.

The easiest way is to use your hands to pull on the end of a section, get the corner of that plastic clip to pop out, then pull on the plastic clip and work it up until it all comes out.

Pull out the cover around the headrest, then continue around and down the other side of the seat.



7. **Remove the Center of the Cover**

The center of the cover is attached with several hook & loops strips on the shoulders. Carefully peel the cover off.

It helps to use your other hand to press on the foam while you peel it off (otherwise the foam can rip if you pull too hard).



8. **Remove the Center of the Cover (Cont.)**

Around the center of the seat the cover is attached with several arrow clips. You will see a small red clip embedded in the foam.

Use one hand to put pressure on the red clip, and the other to pull out and twist the arrow clip on cover until it is free. (Keep pressure on the red clip so that it doesn't get pulled out or rip the foam). Remove the cover from all 8 clips.



9. Un-Clip Bottom Cover

On the bottom of the seat there are two plastic retainer clips that hold the stock cover and foam in place.

Push each clip towards the back to release it, and then push it through the hole until its completely free.



10. Remove the Bottom Stock Cover Edges

Use a flat head screwdriver to carefully push down on the back edge of the seat cover, and pop off the J-Clips that attach to the seat. Once you have the corner edge off, use your hands to pull the edges of the cover off as you go along.



11. Remove the Bottom Stock Cover Edges (Cont.)

Continue to pull the edges of the cover off as you work your way around the front of the seat, and then the opposite side.



12. Pull off the Bottom Stock Cover

The center of the cover is attached with several hook & loops strips on the sides. Carefully peel the cover off from the strips, without ripping the foam. Then remove the stock cover entirely.



Top Cover Installation

13. (Cooled Seats Only) - Transfer Mesh Piece

If you have the factory seats with Cooler Fan/Heaters - take out the white mesh piece from your stock seat, and place it in the pocket section on the back of the PRP Seat Cover. Our Seat Covers for the Cooled Seats uses a XCEL mesh material on the center of the cover that allows the air to still flow through.



14. Install Headrest on Seat Cover

Next you will start installing the top seat cover. Start by laying the cover over the seat, and lining it up. Then attaching the arrow clips at the top of the headrest.

How To: Take the arrow clip and pull it back towards you, then tuck and fold it so that the plastic edge of the arrow clip goes into the slot on the seat back. Push hard until the entire plastic clip snugly fits into the slot on the seat.



15. Install Headrest on Seat Cover (Cont.)

Once the top arrow clip is tucked in, go ahead and tuck in both arrow clips on the sides of the headrest.

Tip: Try to get the one edge of the arrow clip tucked in first, then work your way down to get the rest in easier.



16. Attach Hook n' Loop on Center

Find the White/Green Loop Strip on one side the PRP Seat Cover. Start by Fold/Twisting the White/Green strip inwards towards the center of the seat, then attach it to the hook strip on the foam (this will make the cover tighter in the center of the seat).

Then attach the strips together on the other side of the seat the same way.



17. Install Bottom of Cover

Grab the bottom of the cover, and tuck it under and around the bottom of the foam piece. Pull it tight to ensure that there is not a lot of slack in the front of the cover.

If you have a seat cooler, you can un-clip the wiring harness, run it through the slot in the seat cover, and re-clip it back together.



18. Install Shoulder Clips

Next take the Arrow Clips on the shoulders, and tuck/fold them into the seat back. This section is a little trickier since the slot on the seat is curved. Try to get the center of the clip tucked in first, then slide in the sides.


Do this on both sides of the seats.



19. Install Side Clips

Take the upper clips on the sides, and tuck them in.

If you have any material on the corners that is sticking out - use a flat nose screwdriver to push and tuck the material into the slot in the seat back.

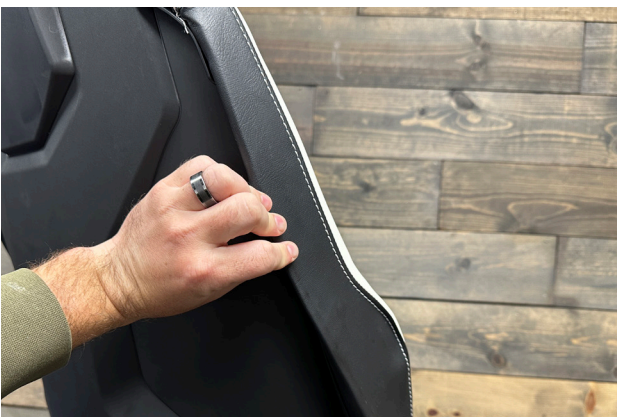

20. Install Side Clips

Next tuck in the large arrow clips on both sides of the seat.

Then just look over the cover and make sure everything is level, even, and pulled tight. Use your hands to pull and push the material as needed to get out any wrinkles or bunches.



21. Re-Install Plastic Harness Slot

Take the plastic faux harness slot and line it up with the slot in the cover. Make sure those clips in the back are lined up with the clips on the seat back, then push hard until they snap into place.



Bottom Seat Cover Installation

22. Lay out the PRP Cover

Lay out the bottom PRP cover. The large flap area is going to go towards the back of the seat and wrap around the foam cushion. The front of the cover has all the J-Clips on it.



23. Wrap the back section of the Cover

Take the foam cushion on the seat, and pop up the back of it. Place the PRP Cover over the back and wrap it over the foam cushion.



24. Line up the Foam and Cover

Place the foam cushion back down, and move it around until its correctly lined up with the seat frame plastic.

Then pull the cover over the front, and make sure it is also lined up correctly with the seat. Ensure the stitch lines at the back are evenly spaced with the stitch on the top cover, and that the cover isnt pulled over too far to one side.



25. Install J-Clip on the Sides

Take these plastic J-Clips, pull them towards you and then tuck/fold them under the cover. But instead of just pushing the whole clip into the seat plastic, you need to line up and get the plastic seat edge to slot into the "J" of the clip.

Start by getting one end of the clip slotted in, then push along the edge until the rest falls into place.



26. Install the Corner Clips

Next take the Arrow Clips on the corners, and tuck/fold them into the seat back. This section is a little trickier since the slot on the seat is curved. Try to get the center of the clip tucked in first, then slide in the sides.

Do this on both sides of the seats.



27. Install the Front Clips

Lastly take the 3 front arrow clips and tuck them in into the seat.

Tuck in any material excess materials on the corners & edges.



28. Check Cover Fitment

Go over the cover once more and push/pull on the material so that its sitting flat and doest have any wrinkles or bunches in it.

Note: If you covers have been sitting in a box for a while, they may have crease lines and wrinkles. We typically suggest waiting 30 days for the material to stretch out and flatten out. Then most of those wrinkles go away.



29. Re-Install Seat into Vehicle

Take your seat and click it back into your vehicle. Re-install any harnesses if necessary.

30. ... And You're All Done!

If you have any questions or experience issues, please contact your retail outlet first for help. However, the staff at PRP Seats is always happy to assist you.

1-800-317-6253.

customerservice@prpseats.com

Thank you! Drive safe!