

Install Instructions

PRP Seat Covers

Can-Am Maverick X3 and Maverick R



Read through all of the instructions completely before beginning the install.

Parts Included:

- A. Seat Covers
 - 2 x Top Covers
 - 2 x Bottom Cover
 - 2 x Headrest Covers

Tools Needed: (not included)

Hands/Opposable Thumbs (Required)
T20 Torx
2x - Medium Zip Ties
Flat Head Screwdriver
Cutter/Snips

Time:

Approx 2 Hours.

Note:

To make installation easier, we highly suggest laying the PRP covers out in the sun just before install. This allows the covers to warm up, and makes the material stretch easier when installing.



1. Remove the Seats

Pull up the bottom cushion up and tilt it forward to expose the 4 bolts. Use a 13mm socket remove the 4 bolts holding the seat to the sliders. Pull the rubber cap off the front of the slider handle. This will allow the handle to slip out of the slot in the seat.

Once this is done, you can remove the seat from the vehicle, and place it on a clean work station.



Bottom Cover Installation

2. Disconnect Bottom Cushion

On the front of the seat, there is a small plastic plug that holds the bottom cushion to the plastic seat.

Use a flat head screddriver to push this plug out, so that you can remove the bottom cushion entirely from the seat.



3. Remove Bottom Stock Seat Cover

Flip the bottom cushion upside down, and you will find several flaps that are attached to the foam on the bottom with hook n loop strips. Un-hook these and fold the cover up onto the top of the cushion.



4. Remove Bottom Stock Seat Cover (Cont.)

On the top of the cover there are several more hook and loop strips that keep the cover in place.

Be very careful not to rip the foam when you pull the cover off. Its best to use two hands and hold the foam down while you carefully go along and pull the cover off the hook n loop strips.



5. Prepare PRP Bottom Seat Cover

Once the stock cover is removed, you can set it aside.

Then grab the PRP Bottom Cover, and orient it with the bottom cushion so its facing the correct direction.



6. Place PRP Bottom Cover On

On the bottom of our cover, we have white loop strips along the center seams. Place the PRP Bottom Cover on top of the foam. Fold the loop strips on the cover inwards, and then attach it down to the hook strips on the foam. That will make the center stay tight.

Work your way around the seat and connect the hook & loop strips. This will hold down the center of the seat cover so it doesn't slide or bunch.



7. Wrap the Seat Cover Around the Sides

Once all the hook & loop strips are attached, make sure the cover looks straight and centered on the cushion. Then grab the sides of the cover, and wrap them around the sides of the foam.

TIP - You can push down on and depress the foam side bolsters to make it easier to get the cover over the edge.

8. Tighten Draw String

Make sure that all the edges of the cover get around the bottom edge of the foam (so that the cover will get tight when you pull the draw string).

Once the covers are all the way on, grab the two ends of the draw string, pull them tight, and tie them off in a knot.

Take the loose end of the string, run it up to the exposed draw string at the top, and tie it off there as well so that the front and back of the cover are connected and secure.





9. Check Fitment on Bottom Cover

Flip the cushion over, and make sure it looks good. Push and pull around the material as needed to get any creases out. If the center of the cover is loose, you may need to re-tighten the draw string, or re-tighten the hook n loop inside the cover.

Note: If your covers have been sitting in a box for a while, they may have crease lines and wrinkles. We typically suggest waiting 30 days for the material to stretch out and flatten out. Then most of those wrinkles go away.

Top Cover Installation

10. Cut Zip Ties

On both sides of the seat, there are two zip ties that hold the cushion to the seat plastic. You will need to cut these to remove the cushion.

We found it easiest to pull the cushion back on that lower corner so you can see the zip tie, then use cutters/snips to get in there and cut the zip ties off. On the seat back, pull off the 2x circle shape washers and set them aside for later.

11. Remove Top Cushion

Once both zip ties are cut, pull up on the bottom of the cushion so that it is free.

There is a hook on the top of the cushion that attaches to the seat. Pull the cushion up and off to unhook it.



12. Remove Top Stock Cover

Unhook all the flaps on the back that have hook n loop strips. Then fold those flaps over and onto the front of the cushion.






13. Remove Top Stock Cover (Cont.)

On the front of the cushion, carefully pull the cover off of the hook n loop strips.

Use two hands to hold the foam while you pull up the cover, so that you dont rip the foam.

Then set the stock cover aside.

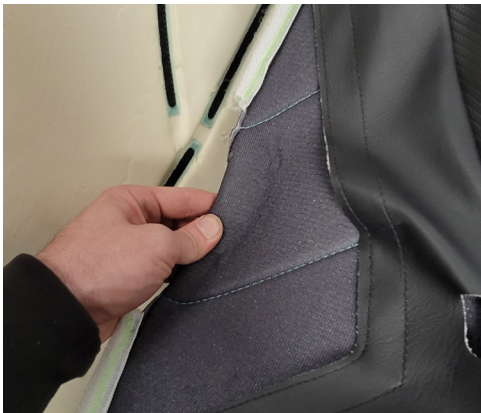

14. Place PRP Top Cover on the Foam

Take your PRP Cover and make sure its facing the correct way. Then line up the loop strips on the inside of the cover with the hook strips on the foam.

Fold the loop strips inwards (towards the center) then press it down and connect to the hoop strips.

Work your way around the sides until all of the strips are connected.



15. Install PRP Top Cover

Wrap the sides of the cover around the foam. You can push/depress the foam to make it easier to get around the edges.

Make sure the cover is centered and looks good. You can push/pull on the material around as needed so the cover sits correctly.



16. Attach PRP Top Cover on the Back

On the PRP cover there are several hook strips on the back flaps. There may be a small protective felt strip on top of the hook strip (so that it doesnt stick to everything while installing). Remove that felt strip.


Then pull the flaps tight, and attach them to the loop strips on the back of the foam.

Make sure the cover is still centered on the front (dont pull it over to far to one side).



17. Attach Top Flap

On this top flap, feed the flap underneath the metal cross bar, then pull it tight and attach the hook n loop strips to each other.

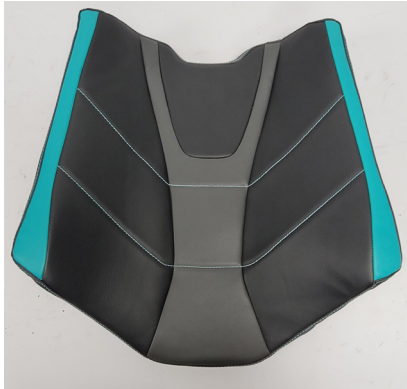

18. Check Fitment of Top Cover

Flip the cushion over, and make sure it looks good. Push and pull around the material as needed to get any creases out. If there are any small creases from shipping, they most likely will flatten out over time as the material warms up and stretches out. If the center of the cover is loose, you may need to re-tighten the flaps on the back, or re-attach the inner hook n loop strips to get the cover tighter.



19. Install Top Cushion

Place the cushion back onto the seat. Line up the top of the cushion with the clip on the back of the seat.

Push the cushion inwards and down until the metal cross bar on the back of the cushion clicks into the clip on the seat back.



20. Install New Zip Ties

Take the circle washer you took off the back of the seat earlier, and remove the old zip ties from them.

Take 2x new medium sized zip ties:

- Feed the zip tie end through one of the slots in the circle washer.
- Then feed it through the seat.
- Then feed through the metal slot in the seat cushion, and wrap it around back through the seat.



21. Install New Zip Ties (Cont.)

- Feed the end of the zip tie through the slot in the circle washer.
- Then zip just a small section if the end through the clip end of the zip tie.
- We recommend getting both sides fed through and zipped on loosely first, then go and tighten down both at the same time.
- Once both are tightend down, you can use cutters/snips to cut off any excess zip tie.



Headrest Cover Installation

22. Remove Headrest

Use a T20 Torx bit to remove the 3x bolts on the back of the headrest.

Then pull the headrest piece off the seat.



23. Place on Headrest Cover

Take the PRP Headrest cover and orient it to match with the headrest. Slide the cover over the top of the headrest first, then the sides, and then pull up and get the bottom to slide on.

Make sure the hook n loop straps dont get caught under the cover when you put it on.



24. Secure the Headrest Covers

Run the hook and loop straps across the cover and connect them to one another in a Y-Shape. The bottom strap should be sandwiched inbtween the side straps.

Check fitment on the front of the cover, and make sure it looks centered/even. You can pull and push the material around until it sits nicely, and adjust the hook n loop straps.



25. Re-Install Headrest

Place the Headrest back onto the seat and hold it in place. Place the top torx bolt back in first, and get it just barely threaded in.

Get the two other torx bolts in and threaded, then use a T20 to tighten down all 3 bolts all the way.



Re-Install Bottom Cushion

26. Line Up Bottom Cushion


Place the bottom cushion back onto the seat. Line up the front of the metal bar at the front of the cushion, and clip it into the plastic hook at the front of the seat.



27. Re-Install Plastic Plug

Take the plastic plug, and make sure the TOP writing is facing upwards.

Use a flat head screwdriver to push the plug back through the slot in the seat. Start by pushing on one side of the plug and pushing it through, then work your way along until the plug is secured in the slot.

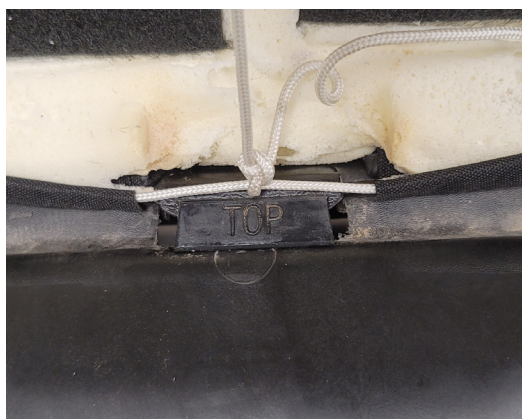



28. Re-Install Seat into Vehicle

Take your seat place it back into the car. Feed the slider handle through the metal slot in the front of the seat. Then line up the seat with the bolt holes for the sliders. Use a 13mm Socket to re-install the 4x bolts until the seat is secure.

Push the bottom cushion back down, and make sure it looks nice.

Repeat the same steps for any other seats in the vehicle. The Front/Rear seats are all the same seats and cover design.

29. ... And You're All Done!

If you have any questions or experience issues, please contact your retail outlet first for help. However, the staff at PRP Seats is always happy to assist you.

1-800-317-6253.

customerservice@prpseats.com

Thank you! Drive safe!