

Install Instructions

PRP Seats

RZR 800 S Spare Tire Mount



Parts

A.



B.



C.



Read through all of the instructions completely before beginning the install.

Parts Included:

- A. 1, PRP 800 S Spare tire mount
- B. 2, Support Brackets
- C. 2, 3" x 1/4" Bolts
 - 4, 1 1/4" x 1/4" Bolts
 - 6, 1/4" Nylock Nuts
 - 12, Washers


Remove all parts from the box and unwrap completely using the packaging to lay out the pieces.

Tools Needed: (not included)

- 7/16" Open end wrench and socket
- T25 wrench (Polaris Factory Supplied Tool)

Time:


Approx 10 minutes.

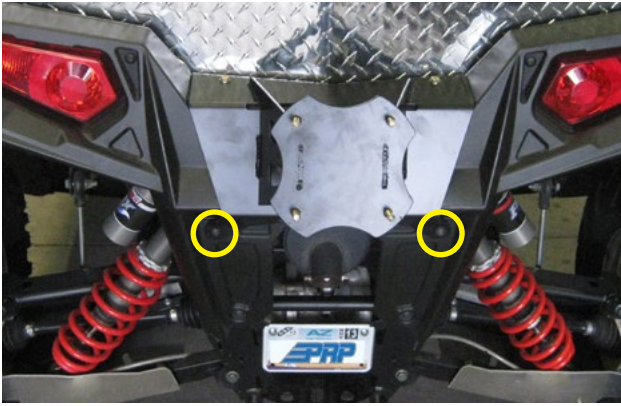

1. Remove Torx bolts

Using the Torx driver supplied with your RZR, remove the lower Torx bolts on each side of the exhaust.


Discard hardware.

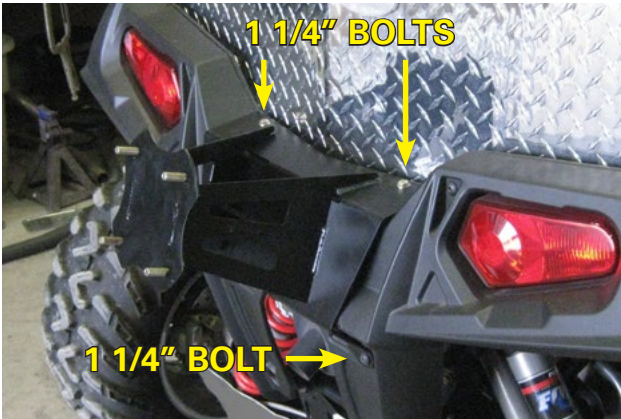

2. Set Mount on edge of bed.

Set the mount on the bed, lining up the top holes of the mount with the Lock-and-Ride holes on the top of the bed edge. Using a washer, insert two 1 1/4" bolts into the top of the mount.

Using the other two 1 1/4" bolts, 4 washers and 2 nuts, secure the bottom of the mount to the bed.

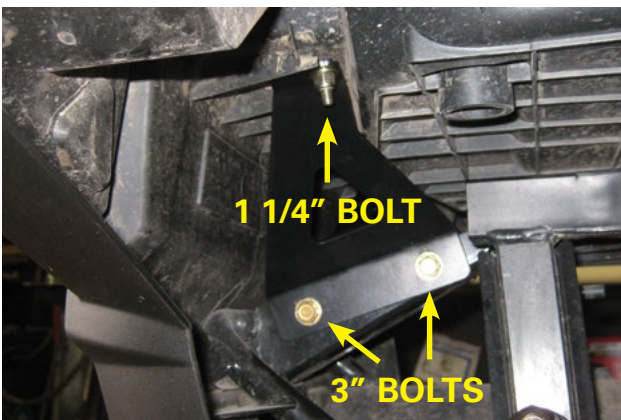

3. Install support brackets

Using a washer and lock nut, install the narrow end of the support bracket where the top bolts appear through the under-side of the bed. Do not tighten until all bolts are installed.

Use the remaining 3" bolts, washers and nuts, secure the support brackets to the frame on each side.

Tighten all nuts and bolts now.



12. Aaaaaand, your done!

Congratulations! Your new PRP Seats 800 S Spare Tire Mount is installed and ready to use.

If you have any questions or experience issues, please contact your retail outlet first for help. However, the staff at PRP is always happy to help at **1-800-317-6253**.

Thank you! Ride Safe!