

PRP SEAT MOUNTS

ADAPTER BRACKETS FOR THE CAN-AM
MAVERICK X3 AND MAVERICK R



INSTALLATION INSTRUCTIONS

BUILT FOR OFF-ROAD



ADAPTER BRACKETS


Your C86
Kit will
contain
the
following:

- (2) Left seat adapter bracket wrapped together
- (2) Right seat adapter brackets wrapped together
- (4) Gold M8 x 1.25mm bolts w/ lock tight
- (4) 1/4 x 20 x 1"
- (4) 1/4" flat washer
- (4) 1/4" lock washer



IDENTIFYING YOUR BRACKETS

- Your bracket will be shorter on one end and longer on the other, as displayed in the image here.
- The shorter side of the bracket will face the front side of your seat. The longer side will therefore go towards the rear.
- The bend on this bracket will move away from the seat once bolted to the seat bottom.

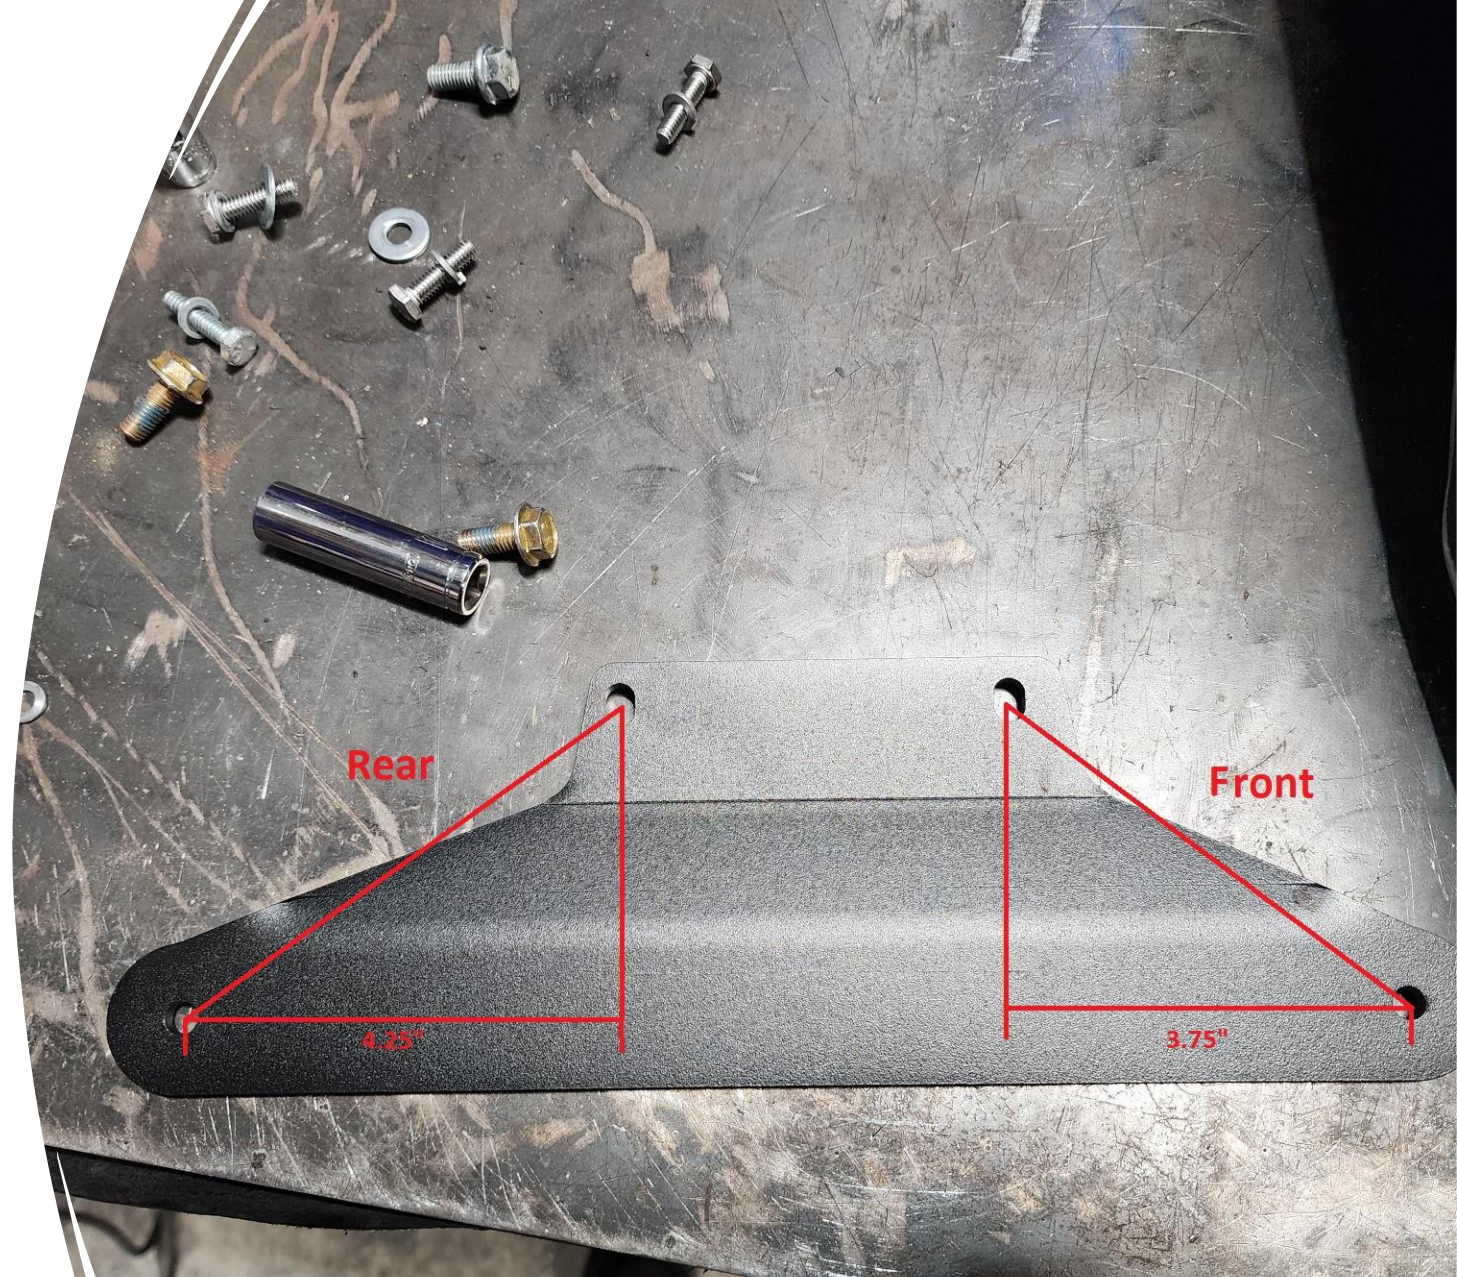

SECURE BRACKET TO SLIDER

- Using the Gold M8 x 1.25mm bolts w/ lock tight provided, secure the bracket onto the trolley portion of your OEM seat slider.
- Ensure that the short “leg” of the bracket faces the front of the seat and be sure that you are using the correct side of your OEM seat slider before tightening.
- Once you are sure you have all parts in the correct position, secure all 4 bolts.



ALIGNING BRACKET TO SEAT

With the OEM seat sliders already attached to your brackets, use the following provided parts to bolt the bracket to the bottom of your seat:

- ¼" x 20 x 1" bolt
- ¼" flat washer
- ¼" lock washer



BUILT FOR OFF-ROAD

PRP

BRACKETS INSTALLED

- Now that you have bolted the brackets to the bottom of your seat, the result should look something like the image to the right.

- NOTE: The harness bolt in locations for the lap belt will both face outward.

If yours does not, you may have put them on the wrong side.

The slider handle will be a big indicator of this as well. If the handle is anywhere other than under the seat, the installation is incorrect.



INSTALLING THE NEW SEAT

- Install your new seat back into your vehicle starting with the front side of the slider rails. You will be using the stock bolts to complete this part of the install.
- Slide the seat as far forward as possible before proceeding to the next step.



INSTALLING THE NEW SEAT

- With your seat slid as far forward as possible, proceed to secure the rear portion of your OEM seat slider using the stock hardware.



A dark, slightly blurred background image showing two PRP racing seats installed in a vehicle's cockpit. The seats are black with white accents and the PRP logo is visible on the headrests. The surrounding environment appears to be a workshop or garage with various tools and equipment visible in the background.

INSTALLATION COMPLETE

Enjoy your new set of PRP seats!

BUILT FOR OFF-ROAD

PRP