

Install Instructions

PRP Seats

Rapid Boat Seat Mount Assembly Instructions



Read through all of the instructions completely before beginning the install.

Parts

A.



Parts Included:

- A. Seat Mount (Base)
- B. Universal Angle Adapter Brackets
2 x Seat Adapter Brackets
- C. Seat Slider
1 x R Side Base Bracket
1 x L Side Base Bracket
- D. Hardware
4x 5/16"-18 Carriage Bolts
8x 5/16"-18 Nylock Nut
8x 5/16" Flat Washers
4x 3/8"-16 x 1" Hex Bolt
4x 3/8"-16 Nylock Nut
8x 3/8" Flat Washer
1x Steel Wire 12"

Remove all parts from the box and unwrap completely using the packaging to lay out the pieces.

Tools Needed: (not included)

- 1/2" Socket
- 9/16" Socket & Wrench
- Pliers

Time:

Approx 20 Minutes



1. Take Parts out of the Box

Lay out the PRP Mounts on a clean table or work station as seen in the photo here. Each mount kit should have 1 Base Seat Mount, 2 Angle Brackets, R&L Side Slider Mechanisms, and Hardware.



2. Attach Adapter Bracket to Right Side Slider

Grab the sliders and (4x) of the 5/16" Carriage Bolts, Washers, and Nylock Nuts. You will need to use the release handle to open the slider, and slide it backwards to access the square bolt holes on the top side of the slider.



3. Attach Adapter Bracket to Right Side Slider (Cont.)

Place one of the Adapter Brackets onto the top of the slider. Make sure that the bracket is oriented as shown so the angled section of the bracket is on the outside of the slider (no-handle side).

NOTE*- You can choose to have the angled mount facing down (as pictured) to get the the seat as low as possible. Or if you want the seat to sit higher up - flip the angle mount so tab holes are raised up.



Attach the 5/16 Washer and Nylock Nut. Then use a 1/2" Socket to tighten it down.

Open the release handle again, and slide it forwards so that you can access the square hole on the back end of the slider. Place a 5/16" carriage bolt through it.

Then attach the Rear Adapter Bracket to the slider with the 5/16 Washer and Nut until they are tight.



4. **Attach Adapter Bracket to Right Side Slider**

Now repeat the same steps to attach the Left Side Slider.

Since this slider doesn't have a release lever, you will need to use your fingers (or a pair of pliers) to open the release mechanism and slide it forward/backwards to place the carriage bolts in.

Make sure that the bracket is oriented as shown so the angled section of the bracket is on the outside of the slider (no-handle side).

Then attach angle bracket to the slider. Slide it backwards and attach the front 5/16 Bolt, Washer, Nut. Then slide it forwards and attach the rear bolt, Washer, Nut. Use a 1/2" Socket to tighten everything down.

5. **Attach Sliders to Base Mount**

Take the base mount, and first figure out which direction it should be facing (PRP Logo towards the front). The raised edges of the mount should be facing upwards. These have slots cut in them so that you can adjust how far back/forward you want the seat/sliders to sit.

Flip the base mount and brackets upside down. Place the base on top of one of the sliders. Line up the bolt studs on the slider with the slong slots on the base mount, then place the base mount down onto the slider.

Install the supplied 5/16 Washer and Nuts. Then tighten down with a 1/2" Socket.

Then place the mount on top of the other slider set. **IMPORTANT** - Make sure both slider slides are lined up parallel/even with one another (otherwise the seat tabs wont line up).

Install the supplied 5/16 Washer and Nuts. Then tighten down with a 1/2" Socket.



6. Adjust Sliders To Be Even


Adjust the sliders to make sure that they are even/level with one another. You may need to slide one side farther forward/backwards to make them even on both sides (otherwise it will be impossible to mount the seat, and they will not slide properly when in the car).



7. Install Slider Wire

We offer heavy duty and dual locking sliders on our mounts that are able to handle the hard impacts of the marine environment. Since the sliders are dual locking, there is a metal wire that runs between them (so that both sliders open at the same time when you move the handle).

Take the metal wire and use pliers to bend about a 1" section on the end to be at 90 degree angle. Feed the end through the 2nd to last hole on the slider release handle. Then bend the wire back around until its in a U shape, and weave around the straight wire (so it wont come unbent over time).

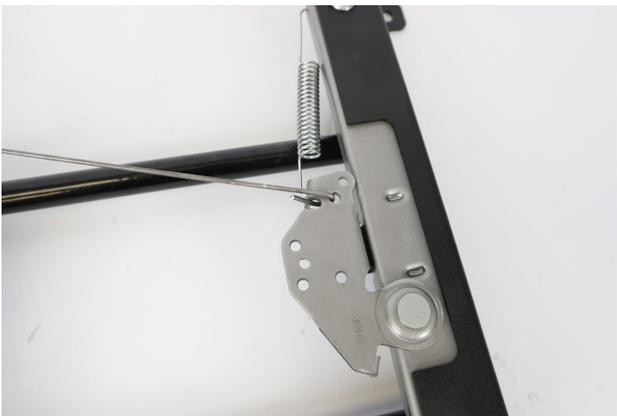

On the other slider, you want to feed that wire through the 2nd to last hole on the rear of the mechanism. Place the wire over that spot and find the spot you need to bend it at. Then bend there at 90 degrees, and feed it through and

8. And you're all set!

If you have any questions or experience issues, please contact your retail outlet first for assistance. However, the staff at PRP is always happy to help at **1-800-317-6253**, or email **customerservice@prpseats.com**

Thank you! Ride Safe!





9. Installing Seats

PRP's Rapid Boat Seat with Tabs has a 14"W x 15"D tabs that line up with the side holes on the Angle Adapter Brackets. Use 3/8" Bolts, Washers, and Nuts to attach the seats to the brackets with a 9/16 Wrench and Socket.

We recommend getting all 4x bolts lined up and hand tight first, then go back and tighten down all the nuts. The Seat frame will flex slightly once the seat is fully tight.

NOTES -

Fresh Water Use ONLY - We only recommend using these seats and mounts in fresh water.

10. Mounting Into the Vehicle

PRP does not supply any hardware to install the mount to the vessel, since this is a universal application, and different boats have different bunks, fiberglass, or locations that they can be mounted to depending on their design.

On the bottom of the mount base, we have provided a ton of bolt holes, so that you can determine the best location to mount.

