

Install Instructions

PRP Seats

Polaris RZR PRO Flat Strap Frame - Onto A Polaris XP & Expedition



Read through all of the instructions completely before beginning the install.

Parts Included:

A. Seat Adapter Brackets

- 2 x Polaris XP Adapter Bracket (Right)
- 2 x Polaris XP Adapter Bracket (Left)



B. Hardware

- 16 x 1/4"-20 X 1" L Hex Bolts
- 16 x 1/4" USS Flat Washer
- 16 x 1/4" Nylock Lock Washers

Remove all parts from the box and unwrap completely using the packaging to lay out the pieces.



Tools Needed: (not included)

- 11mm Socket
- 10mm Socket
- T40
- 13mm Socket

Time:


Approx 45 Mins




1. Slide seat all the way forward so you can get access to the back two bolts.



2. Take a 13mm and remove the two mounts from behind the seat that are keeping it attached to the base. Then slide the seat back forward and use a T40 to pull out the 2 bolts that are in front.

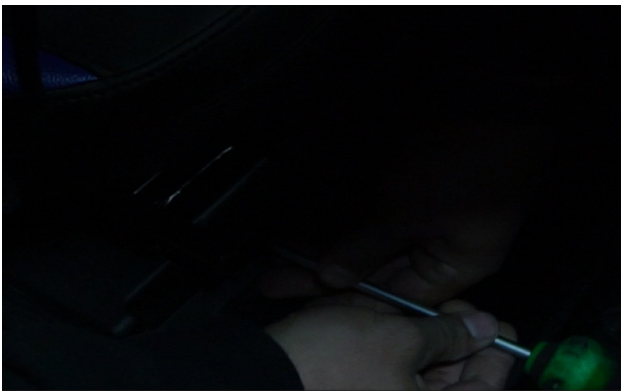

3. Remove seat from vehicle

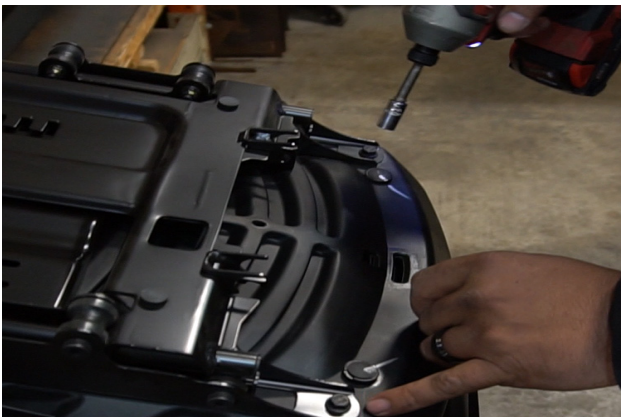

4. Push slider all the way forward and remove the two rear bolts using a 10mm socket. Then slide the slide all the way back to remove the front two bolts using a 10mm socket




5. Now place the mount with the bend side up with the supplied washer, lock washer and hex bolt attached. (See photo) See into place



6. Once everything is lined up, and placed onto the seat base, re-attach the seat slider and orientate it to rest onto the top of the bolt.

Use the supplied hardware to lock the factory slider to the C89 mounts one it's resting on top of the hex bolts.

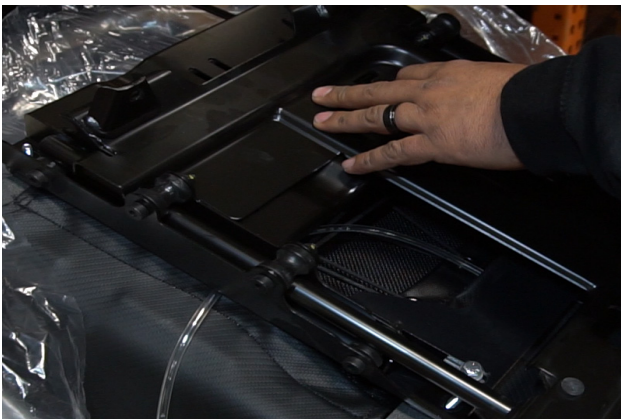

7. Place the PRP Seat into the vehicle. Make sure that everything is aligned up and re-use the factory hardware in the reverse order we took it out.

Secure the T40 bolts first by sliding the seat all the way back.

Slide the seat all the way forward and then secure the factory 13mm bolts back into the slider on the back side of the seat.