

# Install Instructions

## PRP Seats

### Polaris RZR PRO XP

## Front Door Bag Installation



#### Parts

A.



**Read through all of the instructions completely before beginning the install.**


#### Parts Included:

A. 2 x PRP Front Door Bags for RZR PRO XP (Driver and Passenger)

**Remove all parts from the box and unwrap completely using the packaging to lay out the pieces.**

**Tools Needed:** (not included)  
T-40 Torx Socket

**Time:**  
Approx 10 minutes.

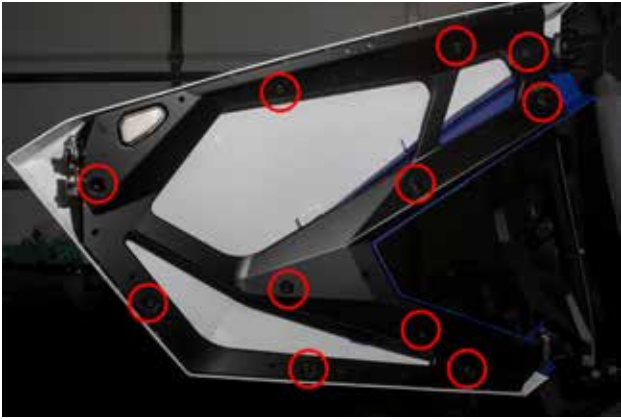

1. **Remove the stock bolts from the door (shown in picture).**

**Use a T-40 Socket to remove the 11 bolts that connect the door's metal frame to the outside plastic panel.**

**Once the bolts are removed, take off the plastic panels.**



2. **Select the appropriate door bag for the door you are installing on (Driver or Passenger).**

**The bottom storage compartment on each bag has a foam cushion inside it. Remove this foam cushion while you install. Simply open the zipper and pull the foam out.**



3. **Place the bag in-between the metal frame and the plastic panel.**

**Push upper and lower storage compartments through the open sections in the frame.**



4. **Line up the cut-holes on the bags liner, with the corresponding bolt holes on the frame and plastic panel. Re-install the bolts so that the bag is secured between the door's frame and plastic panel.**

**TIP: Start by the door latch, then re-install the bolts one by one (The bolts tend to fall out if you place them in loose all in at once).**



- 5. Once the bag is secured, place the foam back into the lower storage compartment. This provides a cushioned Knee Pad for when the ride gets rough!**

NOTE: If you would like even more storage space, you can choose to leave the foam out. Then just use the lower section as another storage compartment.



- 6. Do the same steps for the bag on the other side... and you're all set!**

If you have any questions or experience issues, please contact your retail outlet first for assistance. However, the staff at PRP is always happy to help at **1-800-317-6253**.

**Thank you! Ride Safe!**