

97-02 Jeep TJ Adaptor Mounts (C23)

Install Instructions



Read through all of the instructions completely before beginning the install.



Parts Included:

- A. One set of adaptor mounts
- B. 4, 3/8" Washers
- C. 4, 3/8" x 1" Bolts and nylock nuts

Remove all parts from the box and unwrap completely using the packaging to lay out the pieces.

Time:

Approx 30 minutes.

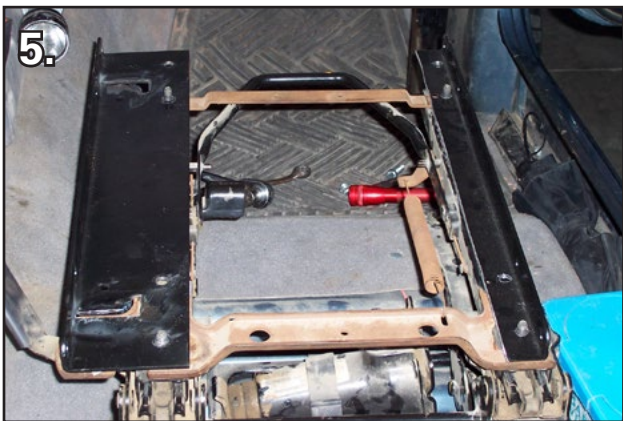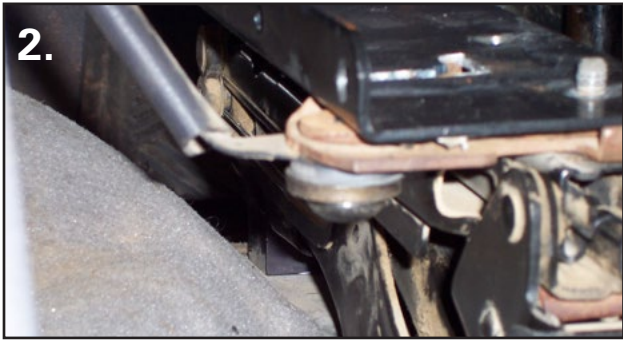

1. Remove your stock seats using the four bolts that connect your seats to the stock sliders.
2. Once the seats are removed, remove the bolt connecting your seatbelt to the stock bracket.

Add two 3/8" washers between the bolt head and the rubber washer.

Re-install the seat belt bolt into stock bracket.

The washers allow clearance for the PRP adaptors.

3. (Passenger Side Only) On the outside of the passenger side slider there are two brackets that are used for the original seat flip cable. These brackets will need to be removed to make room for the PRP adaptors.

Remove the cable, if it was not already removed in step 1.

Using a chisel or grinder remove the rivet and unscrew the bolt and spring holding on the two flip cable brackets.

4. Place a single 3/8" washer over the inside rear stud of the mount.
5. Place the PRP adaptors onto the studs. The wide adaptor should be on the inside with the angle pointing up. Using the original bolts tighten the PRP adaptors.
6. Attach the spring, that was on the stock seat, to the back cross member of the stock bracket.
7. Install your new PRP seats. In order to center your seat you will need to place the seat tabs on the inside of the outside adaptor and outside of the inside adaptor. Then use four bolts and nuts provided to secure your seat to the adaptors.

Note:

In order to flip the seat forward reach under the front of your seat to turn the flip handle. If your new PRP Seats do not fold, it will be necessary to first slide the seat as far forward as possible to allow for enough room.

If you have any questions or experience issues, please contact your retail outlet first for help. However, the staff at PRP Seats is always happy to help at **1-800-317-6253**.

Thank you! Ride safe!